

Preparation of Tube

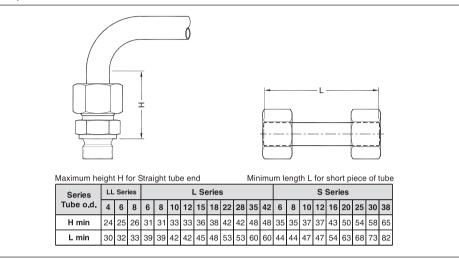

Saw off Tube at 90°

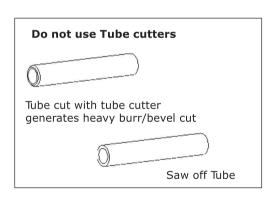



Deburr inside and Outside edges of tube upto 0.2x45°



Lubricate threads (Exteral and Internal), cone of the Coupling body and the Ferrule









Slip the Coupling Nut and Ferrule over tube end



Ensure Coupling Nut and Ferrule are facing the right way






Screw the Coupling Nut manually on to Coupling body until finger tight.



Mark the Coupling Nut and holding device to measure the prescribed turns

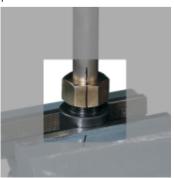





Incorrect

Tighten the coupling Nut by spanner until the tube stops rotating by hand



Tighten the Coupling Nut around 1 1/4 to 1 1/2 round **Tube must not rotate**



Sectional View of Straight Coupling assembly with Tube

